

IR Codes / TDAI-2170

1	0x10EF	0x00FF
2	0x10EF	0x01FE
3	0x10EF	0x02FD
4	0x10EF	0x03FC
5	0x10EF	0x04FB
6	0x10EF	0x05FA
7	0x10EF	0x06F9
8	0x10EF	0x07F8
9	0x10EF	0x08F7
UP	0x10EF	0x0AF5
DOWN	0x10EF	0x0BF4
RIGHT	0x10EF	0x0CF3
LEFT	0x10EF	0x0DF2
ANALOG	0x10EF	0x0EF1
STANDBY	0x10EF	0x0FF0
VOL_DOWN	0x10EF	0x10EF
MUTE	0x10EF	0x13EC
MENU	0x10EF	0x16E9
ENTER	0x10EF	0x19E6
VOL_UP	0x10EF	0x1AE5
DIGITAL	0x10EF	0x1FE0
0	0x10EF	0x30CF
CH_DOWN	0x10EF	0x31CE
CH_UP	0x10EF	0x32CD
INFO	0x10EF	0x33CC
ON	0x10EF	0x807F
OFF	0x10EF	0x817E
DIG_1_COAX	0x10EF	0x916E
DIG_2_COAX	0x10EF	0x926D
DIG_3_OPT	0x10EF	0x936C
DIG_4_OPT	0x10EF	0x946B
DIG_5_OPT	0x10EF	0x956A
DIG_6_OPT	0x10EF	0x9669
DIG_7_USB	0x10EF	0x9768
DIG_8_HDMI	0x10EF	0x9867
DIG_9_HDMI	0x10EF	0x9966
DIG_10_HDMI	0x10EF	0x9A65
DIG_11_HDMI	0x10EF	0x9B64
DIG_12_HDMI_ARC	0x10EF	0x9C63
ANA_1_RCA	0x10EF	0x9D62
ANA_2_RCA	0x10EF	0x9E61
ANA_3_RCA_HD	0x10EF	0x9F60
ANA_4_RCA_HD	0x10EF	0xA05F
ANA_5_RCA_HD	0x10EF	0xA15E
ANA_6_XLR	0x10EF	0xA25D